 


Electronic Soap Dispenser Parts Breakdown

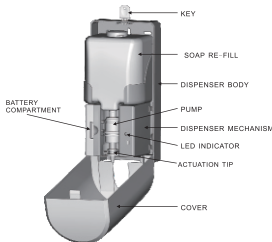

Mounting Instructions

- Insert the provided key into the key slot on the top of the dispenser. Push the key down to release the front cover.

For installing on a mounting plate:

- With the front cover open, align the 4 mounting holes on the dispenser with the 4 mounting holes on the mounting plate.
- Fasten the dispenser to the mounting plate with the provided screws and nuts.

For installing on a wall:

- With the front cover open, hold the dispenser on the wall in your desired mounting location.
- Using the dispenser as a template, mark the 4 mounting holes on the wall.
- Set the dispenser aside and drill 4 screw or anchor holes on the marks.
 - For brick, block, concrete and drywall mounting surfaces, use anchors.
 - For wood mounting surfaces, use screws only.
- Position the dispenser over the screw holes and fasten to the wall with the provided screws.

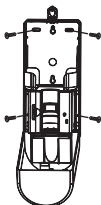


FIGURE 1

Installing Batteries

- Depress the tab at the front of the battery compartment and pull the battery compartment forward.
- Insert 6 x AA batteries; note polarity markings inside battery compartment.
- Reinstall the battery compartment by sliding it back into the dispenser body until you hear it "click".

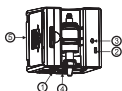


FIGURE 2

Operation

- Remove the cap from the reservoir and fill the reservoir with liquid soap/sanitizer. Replace cap.
- Close dispenser cover. Indicator light will blink 3 times.
- Place hands underneath of dispenser, within 5" (125mm), dispenser will automatically dispense soap/sanitizer.
- If more soap/sanitizer is required, open cover and adjust toggle switch to desired setting (see Figure 2):
 - 1 = Dispenser activates once
 - 2 = Dispenser activates twice
 - 3 = Dispenser activates three times

1. POWER SWITCH
2. TOGGLE SWITCH
3. LED INDICATOR
4. SENSOR PARTS
5. BATTERY COMPARTMENT

Troubleshooting

If dispenser is not responding:

- Check that cover is closed completely; close cover, indicator will blink 3 times when cover is closed properly
 - Check that batteries are correctly installed; check polarity and re-install
 - Inspect for damage or corrosion on the battery terminals; if damage or corrosion is found, contact manufacturer for replacement parts
- Indicator light blinks red at 1 second intervals:
- Batteries are low; replace batteries
 - If indicator continues to blink, contact manufacturer
- Indicator Light blinks 5 times in a row, repeatedly:
- Motion sensor is obstructed; check for and remove any objects within 10in (25cm) of the bottom of the dispenser
 - Wipe sensor parts clean (see Figure 2)

